 


# GrooveStation

**Mini Wireless FM transmitter  
for your iPod**

Quick Start Guide:

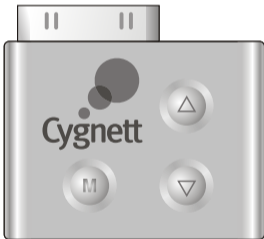

Cygnett.●

# Warranty

**Cygnett 1 Year Manufacturers Warranty**  
Register online at [www.cygnett.com](http://www.cygnett.com) to activate your warranty.

Thank you for purchasing Cygnett's GrooveStation mini FM transmitter. Now you can broadcast your iPod tunes to your car stereo.


Getting Started .....	2
Tuning .....	3
Setting the Memory .....	4

**Step 1**


- A) Select a clear (unused) frequency on your car or home stereo FM radio. The ideal frequency will have static (no music) and static on the neighbouring channels. The GrooveStation operates on wide range of FM channels (87.9Mhz to 107.9Mhz).



- B) Insert the GrooveStation FM transmitter into the dock connector (at the base of your iPod). A frequency will be displayed on your iPod screen. If a selection is not made within 3 seconds the iPod will return to Play mode.

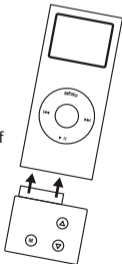

- C) Set the GrooveStation to the same station using the up/down buttons on the front of the unit. You can hold down the up/down button to speed up the navigation through the channels.

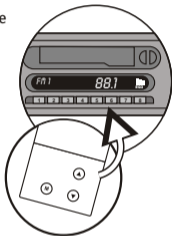


- You can view the frequency selected anytime by pressing any of the buttons on the front of the unit (M/UP/DOWN).
- Ensure your car radio volume is turned up to the desired level and control your iPod as usual.
- The GrooveStation will automatically switch off after 60 seconds if no signal is received.
- The GrooveStation is powered by your iPod, please ensure your iPod charged before use.

The GrooveStation will automatically memorise the last FM frequency used and will set to that frequency when the GrooveStation is re-inserted.

You can pre-set nine frequencies to find the clearest channels instantly by choosing the desired frequency then holding the M button for more than 3 seconds then use the up down buttons to select the preset number desired. Push M once to store the frequency on the desired preset number.

To select the pre-set channels in the memory:

- 1) Press the M button once
- 2) The frequency selection will appear on your iPod screen
- 3) Scroll through the preset frequencies by pressing the UP/DOWN button
- 4) Ensure your radio is tuned to the same frequency

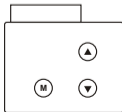

This device complies with Part 15 of FCC Rules. Operation is subject to the following conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference that may cause undesired operation.
- (3) This equipment may be operated in GB.

Hereby, Cygnett declares that this FM Transmitter is in compliance with the essential requirements & other relevant provisions of Directive 1999/5/EC. The Declaration of Conformity may be consulted at <http://www.cygnett.com/pages/support.htm>

**Serial No:**  
**010607**



**CE 0560** 

Cygnett. 

©2007 Cygnett [www.cygnett.com](http://www.cygnett.com)