



GrooveTour FM Transmitter Operating Instructions

Thank you for purchasing Cygnett's GrooveTour FM Transmitter. Now you can transmit your MP3 music from your MP3 capable phone to your car or home stereo.



- Contents:
- 1x FM Transmitter
 - 1x 12v Car Charger Adaptor
 - 1x USB Charging Cable
 - 5x Mobile Phone Adapters

For product support, check the latest instructions & updates in the Support Section of our website: www.cygnett.com or email us at info@cygnett.com

Cygnett 12 month Manufacturers Warranty. Register online at www.cygnett.com to activate your warranty.


Step 1

Charging the Transmitter via the 12v Car Charger

To Charge the lithium battery make sure your car is running, **then** plug the adaptor into the 12v cigarette lighter with the charging cable plugged in the adaptor and the other end into the transmitter (see below).

The LED on the power adapter will be RED when charging and GREEN when fully charged. You may use the device while it is charging.

Allow up to 1.5 hours for 80% charge & 3 hours for complete charge.

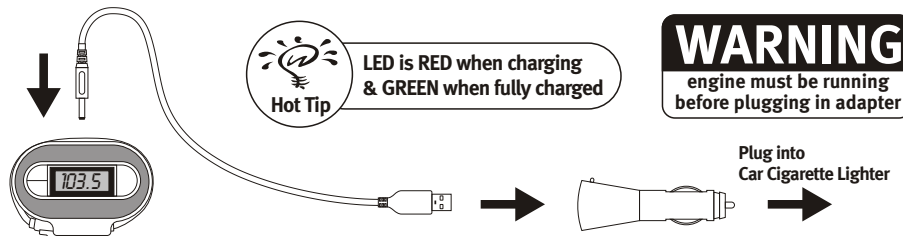

Charging the Transmitter via your computer


You can also use your computer's USB port to charge the battery. There is no indicator to tell you when it is fully charged, so please Allow 3-4 hours for a full charge. Please Note: Charging will stop if your computer goes into "Sleep Mode".

For first time use, please charge the unit fully before letting it discharge to maximise the life of your lithium battery.

Step 2

Connecting the Transmitter

Groove Tour - Unclip the audio cable from the transmitter and plug into the appropriate mobile phone connector for your phone.

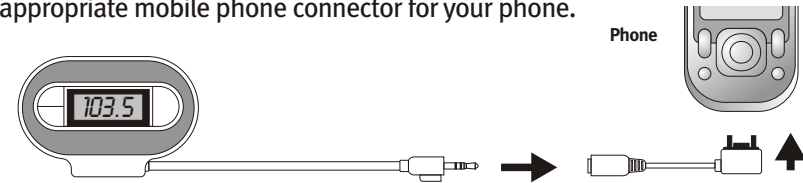

Note: If the unit does not receive a signal it will switch itself off after 60 seconds

Step 3

Tuning

Turn on your FM radio tuner and adjust/scan until you find a clear (unused) frequency. Turn on the transmitter (press & hold the ON / OFF button on the transmitter until the display lights up). Use the scan buttons on the transmitter to set the frequency to the same as the FM radio. Your music will now be played through your FM radio.



- Try different frequencies to determine which has the best sound.
- If you are experiencing static or distortion, adjust the volume on your MP3 Phone to achieve the best results.
- You may wish to adjust the settings on your MP3 Phone so that the screen is always backlit for strongest and most stable FM signal. Please refer to your unit's manual for notes on how to do this.

This device complies with Part 15 of FCC Rules. Operation is subject to the following conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference that may cause undesired operation.
- (3) This equipment may be operated in GB.

Hereby, Cygnett declares that this FM Transmitter is in compliance with the essential requirements & other relevant provisions of Directive 1999/5/EC. The Declaration of Conformity may be consulted at <http://www.cygnett.com/pages/support.htm>

