

UNISON®

i-XD
Dock System
User Manual



Warranty

Unison 3 Year Manufacturers Warranty

Register online at www.cygnett-unison.com to activate your warranty.

Thank you for purchasing the Unison i-XD. For optimal performance and safety, please read the manual carefully and retain it for future reference.

Important Safety Instructions

- 1 Read all safety & operating instructions before use & take notice of all warnings.
- 2 Follow all operating instructions and retain for later use.
- 3 Do not use this unit near water or moisture.
- 4 Clean only with a dry cloth.
- 5 Do not block any of the ventilation openings in accordance with the manufacturer's instructions.
- 6 Do not install near any heat sources such as radiators, heat registers, stoves, or other speaker systems (including amplifiers) that produce heat.
- 7 Protect the power cord from being walked on or pinched, particularly at the plugs, convenience receptacles and the point where they exit from the speaker system.
- 8 Only use the attachments/accessories specified by the manufacturer.
- 9 Unplug all electrical components during lightning storms or when unused for long periods of time.
- 10 Do not allow children or animals to play with the unit or power cable
- 11 Do not attempt to service the dock yourself. Refer all servicing to a qualified service professional. Servicing is required when the dock has been damaged in any way (i.e. power-supply cord/plug is damaged, liquid or objects or have fallen inside the dock, the dock has been exposed to rain or moisture, the dock has been dropped or does not operate normally).

Blue line shows cut line
do not print

Contents

1

Introduction	2
What's in the Box?	2
Connecting your iPod	3
Connecting the dock	4
Operation	5
Troubleshooting	6

Blue line shows cut line
do not print

Welcome

Thank you for choosing the Unison i-XD iPod Dock System. Engineered to bring you an unsurpassed music listening experience, the sophisticated iPod dock and remote enables your iPod to be played on any audio system with full control, bringing life to every track on your playlist.

What's in the Box?

iPod dock



 
iPod inserts




Remote control




S-Video cable



 
3.5mm to RCA cable



USB cable

 

DC power adapter*

 

*Only required for i-XD model

 
 
User manual



Blue line shows cut line
do not print

Connecting to your iPod

3

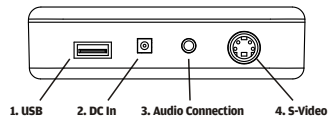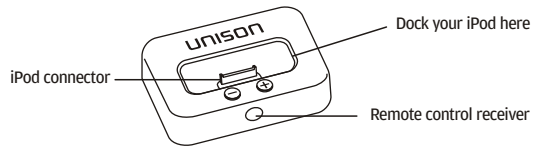

Blue line shows cut line
do not print

Connecting the dock

4

1. Connect the dock to your audio system or speakers using the Audio (3) cable (included).
2. Plug the power adaptor to an AC power outlet and the other end to the DC in jack (2) to charge your iPod.
3. For viewing video footage, connect the S-video cable to the dock (4) and into your television. This requires an iPod with video capabilities. To play video from later model iPods, iPod touch & iPhone please wait approx 40 sec after docking for iPod or iPhone to sync with the dock for video output.

 
Note: If having difficulties please remove iPod/iPhone from dock, check video output settings & try again

4. To sync your iPod with your computer, connect the included USB cable from the dock (1) to your computer. Your iTunes should automatically start after a short while and sync with your iPod.
5. Once you have connected the cables to the rear of the dock, slot in the appropriate insert for your iPod. Dock your iPod on the iPod connector.
6. To take full advantage of the stereo sound, we recommend you place the dock close to the centre of your entertainment system and separate the speakers.
7. To adjust the volume via the dock press the (+) or (-) buttons on the front of the dock.

Operating the Speaker System via remote control and Remote Control Features

Note: To utilize the remote control you will have to wait approx 40 seconds for the iPod to synchronize with the dock.

- **Backlight:** Your iPod's backlight is switched on for 30 seconds
- **Mute:** Changes between mute and mute off.
- **Repeat:** Changes your iPod's repeat status. repeat off ==> repeat one track ==> repeat all tracks==> repeat off
- **VolUp:** Volume up
- **Shuffle:** Changes your iPod's shuffle status. Shuffle off ==> shuffle tracks ==> shuffle albums ==> shuffle off
- **Rew/Previous:** Play previous track. Press and hold to scan backwards through the track.
- **Play/Pause:** When your iPod's power is on, changes play status between play or pause. When your iPod's power is off, press to turn on iPod.
- **FF/Next:** Play next track. Press and hold to scan forward through the track.
- **Menu:** Works as your iPod's Menu button
- **VolDown:** Volume down
- **Menu Up:** Works as your iPod's Menu Up button
- **Enter:** Works as your iPod's Enter button
- **Menu Down:** Works as your iPod's Menu Down button

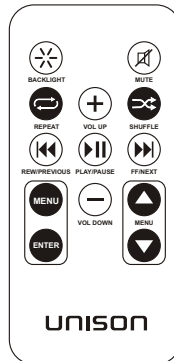

Problem	Cause	Resolution
No audio output	<ul style="list-style-type: none"> • Audio leads not connected properly • Faulty leads • Volume turned down on dock 	<ul style="list-style-type: none"> • Connect leads • Replace leads • Turn up volume on dock
iPod is not charging	<ul style="list-style-type: none"> • Power is not on • Problem with the power supply 	<ul style="list-style-type: none"> • Turn power on • Contact Cygnett for replacement
No video output	<ul style="list-style-type: none"> • iPod not configured properly for video out • iPod is not synchronized with the dock • Cables not correctly attached 	<ul style="list-style-type: none"> • Re-configure iPod • Wait for up to 5 mins for synchronization • Re-attached cables correctly
Remote does not work	<ul style="list-style-type: none"> • Not synchronized with iPod 	<ul style="list-style-type: none"> • Wait 40-90 seconds for dock & iPod to synchronize

If you are still unable to resolve your problem with our product, please contact Cygnett-Unison directly via email at support@cygnett-unison.com, or return to your place of purchase.

Blue line shows cut line
do not print

UNISON[®]

**DESIGNED & DEVELOPED IN AUSTRALIA
MADE IN CHINA
CYGNETT UNISON PRODUCT CODE: U-5-IXD**

**website: www.cygnett-unison.com
email: info@cygnett-unison.com**

**For help or technical support,
please email: info@cygnett-unison.com**



Blue line shows cut line
do not print