

Sonata

Multi function speaker system
for iPhone & iPod

Quick Start Guide



Cygnett.

Warranty

Cygnett 12 Month Manufacturers Warranty

Register online at www.cygnett.com to activate your warranty and receive a bonus 12 months.

For product support, check the latest instructions & updates in the Support Section of our website: www.cygnett.com or email us at info@cygnett.com



We're here to help!

Please get in touch with our Cygnett support team in Australia +61 (3) 9429 2552 or we're just an email away help@cygnett.com

Safety Precautions & Maintenance	2	
Getting Started	3	
Overview	4	- 5
Operation	6	- 12
Technical Specifications	13	
Troubleshooting	14	

Safety Precautions & Maintenance

2



Please read these operating and maintenance (servicing) instructions before installing and operating your speakers.

WARNING: To reduce the risk of fire or electric shock, do not expose this speaker system to rain or moisture (including swimming pools or objects filled with liquids, such as vases or drinks).

Important Safety Instructions

1. Always read all Safety and Operation instructions before use. Retain instructions for later reference.
2. For indoor use only. Do not expose the speaker to liquid, moisture or humidity.
3. Do not use abrasive cleaners to clean the speaker case as they may damage the finish. Always unplug the unit before cleaning.
4. Do not expose the speaker to extremely high or low temperatures.
5. Keep the unit away from direct sunlight.
6. Use only accessories and attachments as supplied and as designated in the instruction manual.
7. Do not attempt to open or modify the speaker in any way, as it does not contain any user serviceable parts. Please refer all servicing to qualified personnel.
8. Please store the unit in a dry place that is free from extreme temperatures and dust.
9. Always operate the speaker on a flat and level surface for operation.
10. Always operate the speaker unit away from children and animals who may play with the power cords and other small parts.
11. Always thoughtfully dispose of the packaging and the unit in accordance with the local regulations and in a responsible manner.

Thankyou for purchasing a Cygnett product. Please take the time to read the instruction manual prior to operating your Cygnett product.

The Cygnett Sonata is an AM/FM alarm clock speaker featuring iPod dock, auxiliary input and remote control, designed for use with iPod and iPhone.

This device can be used as an iPod dock for charging and listening to audio or as a speaker for a non iPod audio device such as an MP3 compatible phone, CD Player or PC. The versatile alarm clock with dual alarms allows for flexibility to wake you up at different times.




The Cygnett Sonata is compatible with, and will charge most models of iPod including the latest iPod nano, iPod Touch, and iPhone 3GS. Just plug your iPod in and press play.

Please read all operational and safety instructions thoroughly before commencing operation of the unit. Please follow all instructions carefully.

Note: Please retain these instructions for later reference.


Overview

1. iPod dock
2. Function/volume knob
3. Power/dimmer knob
4. Display
5. FM antenna cable
6. Auxiliary input
7. DC power jack

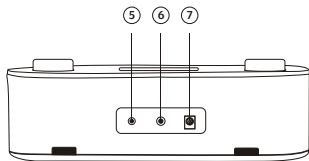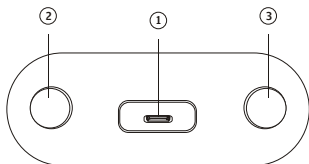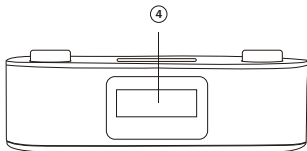


Display

8. Time
9. AM/PM
10. iPod, Aux, FM & buzzer source and alarm source indicator
11. Alarm 1 indicator
12. Alarm 2 indicator
13. Date/month

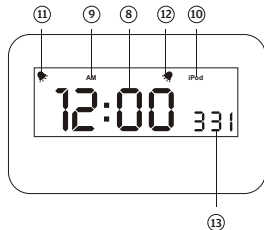

1. Power
2. "FUNCT" - Function button
3. "MUTE" - Mutes the speakers
4. "SCAN" - activates FM automatic station searching
5. "MENU" - iPod menu button
6. "DIMMER/SNOOZE" - Dimms LCD/Activates Snooze function
7. I◀◀ - Previous song/Rewind
8. Play/Pause ▶
9. ◀◀I - Next song/Fast forward
10. "ALARM1" - Alarm 1 on/off
11. - iPod menu up/FM tuning up
12. "ALARM2" - Alarm 2 on/off
13. Volume down
14. "ENTER" - Enter button
15. Volume up
16. "TREBLE +" - Increase treble
17. - iPod menu down/FM tuning down
18. "BASS +" - Increase bass
19. "TREBLE -" - Decrease treble
20. "DATE/TIME" - Date and time setting
21. "BASS -" - Decrease bass

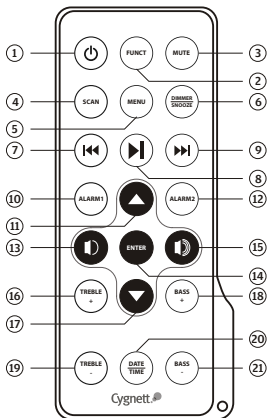

To use your remote control please follow these instructions.

1. Unpack remote control and remove any protective covering.
2. Install battery with correct polarity, refer to markings on the inside of battery compartment lid.

The remote control can be used to directly control the functions of the Cygnett Sonata speaker unit. In addition, the remote can be used to control most general functions on most iPods.

Operation

To setup your Sonata iPod speaker system, please follow these simple steps:

- 1) Carefully unpack speaker, remote control, iPod inserts and power supply.
- 2) Carefully unwind power supply cable and connect to the socket on the rear of the speaker unit. Connect the power supply plugpack to a suitable mains outlet.
- 3) Carefully unwind FM antenna cable and extend.
- 4) Place unit on a stable, flat, level surface out of direct sunlight. Always avoid leaving the unit in direct sunlight as this may cause damage.
- 5) Select best suitable iPod dock insert for your iPod and fit into dock.
- 6) To turn your speaker unit on, simply depress and hold the right hand knob on the top of unit for two seconds. The unit will turn on.

Sound

Volume can be controlled either using the volume buttons on the remote, or via turning the left hand side knob on the top of the Sonata speaker unit.

Treble & bass can easily be adjusted by utilizing the buttons located on the remote control.

Clock

The Cygnett Sonata unit incorporates a 12Hr/24Hr clock.
To set the time:

- 1) Turn the unit on by pressing and holding the power button for two sec, or by pressing the power button on the remote control.
- 2) Press and hold the “DATE/TIME” button on the remote control until the display flashes.
- 3) To set the time, use the up and down arrows on the remote control to adjust the hours. Press “DATE/TIME” button to confirm, the minutes will now flash.
- 4) Use the up and down buttons to select the correct minutes. Press “DATE/TIME” button to confirm, the date will now flash.
- 5) Use the up and down buttons to change the month, press the “DATE/TIME” button to confirm.
- 6) Repeat step 5 for days and year. Once the date is set, the display will flash with the 12/24 hr selection. Use the up and down buttons to change and the “DATE/TIME” button to select.

Congratulations, your clock is now set!

Tip: to show the date and time at any stage, press the “DATE/TIME” button on the remote control.

Alarm

The Cygnett Sonata unit incorporates a dual alarm which can be set to wake you up anytime with your favorite iPod tune, FM radio or a traditional buzzer.

To set, please follow these instructions:

- 1) Turn the unit on by pressing and holding the power button for two sec, or by pressing the power button on the remote control.
- 2) Press and hold the “ALARM1” button on the remote until the alarm time flashes.
- 3) Set alarm hour by adjusting using the up & down buttons on the remote or via turning the “Dimmer/Snooze” adjustment knob. Press the “ALARM1” button to confirm. The minutes will now flash
- 4) Set the minutes in the same manner as per setting the alarm hours above. The alarm volume level will now display. Adjust the volume using the up and down buttons and press the “ALARM1” button to confirm. The currently selected alarm source will now flash.
- 5) Select the desired alarm source using the up & down buttons on the remote control. Select from iPod, FM radio and buzzer. NOTE: The FM radio will sound with the last used station. Press the “ALARM1” button to select, the days selection will now flash
- 6) Using the up & down buttons on the remote control, select alarm activation days from “F 1-5” (Monday - Friday), “F 1” (once off alarm), “F 1-7” (every day), & “F 6-7”(Sat & Sunday). Press the “ALARM1” button to confirm. Alarm # 1 is now set, to set Alarm #2, please follow instructions above, utilising the “ALARM2” button on the remote.

To activate/deactivate either alarm, simply press the relevant alarm button on the remote control.

To cancel alarm when sounding; press the power button located on the remote control, or press and hold the right hand side knob on the top of the unit.

To activate/deactivate the alarm at any time, press the right hand side knob on the top of the unit, or the relevant alarm button on the remote control. The Alarm 1 indicator on the display will illuminate accordingly.

Snooze function.

To activate the snooze function; when alarm sounds press the right hand knob on the unit, or the “DIMMER/SNOOZE” button on the remote. Alarm will pause for 5 min and re-sound.

Dimming

The Sonata speaker incorporates a digital display with 3 stepped dimmer functions. Dimming can be activated by either pressing the “DIMMER/SNOOZE” button on remote control or by rotating the right hand knob on the top of the unit.

NOTE: Dimming can only be adjusted with the unit turned on. The left hand knob will not dim the display, when unit is in FM mode.

iPod Docking

To dock, charge and play your iPod, please follow the following instructions.

1. Fit iPod carefully into dock, docking connector should easily mate with socket on your iPod. Please note: Do not force iPod, but carefully slide over dock connector as force may damage your iPod.
2. Turn speaker unit on, iPod should indicate that power is now connected.
3. Select desired song using either the remote control or the buttons located on your iPod.
4. To play, press the play button on your iPod or on the remote.
5. Volume can be adjusted by using the volume control buttons on the top of the unit, or the volume controls on the remote.

Tip: Cygnett recommends always using the remote control to navigate iPod/iPhone menus & select music. Repeated use of iPod controls whilst docked may place undue stress upon dock connector or socket on the iPod.

FM Radio

To listen to the FM radio, please follow these instructions.

1. With the unit turned on, select either the FM radio using either the “FUNCT” button on the remote, or by pressing the left hand side knob on the unit until “FM” is displayed on the screen.

2. Manually adjust the frequency, use either the up and down buttons located on the remote control.

NOTE: To manually store a radio station as a preset, press and hold the “ENTER” button on the remote control. Select preset number and press “ENTER” to confirm. To select a preset station, use either the Up and Down buttons on the remote, or the right hand side knob on the main unit.

Auto Scan/Store

The Sonata speaker features an FM radio auto-scan function. This function will automatically store radio stations into the 15 memory presets.

To activate: press and hold for 3 seconds the “SCAN” button located on the remote control. The FM radio will start to scan and store stations. The unit will store the first 15 strong stations detected, pausing on each station for 2 seconds. To reject a station, press any button except for the Power or “SCAN” buttons

The auto scan feature will write over any saved stations in the speaker unit's memory.

Other devices

To listen to an external audio device via the “AUX IN”, auxiliary input please follow these instructions:

1. Connect an audio source such as a third party MP3 Player, PC, CD player or other audio source via the 3.5mm auxiliary input socket located on the rear of the Cygnett Sonata.
2. Turn the unit on and select Aux using either the “FUNCT” button located on the remote, or by pressing the left hand side button on the top of the Sonata unit.
3. Use the +/- volume buttons to select the required volume

Clock backup batteries

The Cygnett Sonata allows for two 1.5V AA size back-up batteries.

To insert batteries, open battery compartment on base of unit and insert, observing correct polarity as indicated inside battery compartment. Please note: The batteries are for back-up of the Clock/Alarm information only and will not power the speaker unit. Cygnett recommends the use of Alkaline batteries for best performance.

Output Power	:	3W rms x 2
Power Supply	:	240V AC 50Hz
Speaker Size	:	2" (50mm)
Auxiliary Input	:	3.5mm stereo phono plug

Troubleshooting

If you are experiencing problems with the Cygnett Sonata speaker system, please try the following:

1. Check the connection of the power cable to ensure that it is securely plugged into the speaker and the AC wall outlet and that unit is turned on.
2. Check that the volume is turned up on the main unit.
3. Check that the correct mode has been selected.
4. Check that a compatible iPod is correctly inserted into the dock or the FM radio is selected.
5. Check that the remote control is functioning correctly.

Problem	Cause	Resolution
No audio and no display	<ul style="list-style-type: none"> •Power is not connected •Display is dimmed •Faulty plug pack power supply 	<ul style="list-style-type: none"> •Connect power & recheck •Increase display brightness •Contact Cygnett for a replacement
No audio, but display works	<ul style="list-style-type: none"> •Incorrect audio mode selected •Volume turned down on unit •iPod not connected properly •Faulty speaker or iPod 	<ul style="list-style-type: none"> •Select correct audio mode •Turn volume up using volume controls •Remove iPod from dock and reconnect •Contact Cygnett
Poor FM reception with static or crackling	<ul style="list-style-type: none"> •Interference from other devices or poor reception quality •iPhone is not operating in Air-plane mode 	<ul style="list-style-type: none"> •Relocate position of units FM antenna to receive a clearer signal •Select “Yes” to turn on Air-plane mode when you plug your iPhone into the dock
Remote control does not control my iPod	<ul style="list-style-type: none"> •Flat batteries •iPod touch or iPhone not unlocked 	<ul style="list-style-type: none"> •Replace batteries •Please physically unlock the iPod touch or iPhone using the slider shown on the screen when you insert unit into the dock
iPhone presents a message when plugged into dock	<ul style="list-style-type: none"> •iPhone recommends that you operate it in Air-plane mode to prevent interference 	<ul style="list-style-type: none"> •Select either “Yes” to operate in Air-plane mode with reduced interference, or “No” to still operate as a telephone whilst connected to the speaker

Please email Cygnett directly at info@cygnett.com if you are still unable to resolve your problem with our product.

Disposal of waste products

This product complies with the European directive 2002/96/EC for Waste electrical products, as denoted by the Weee symbol on the product and packaging. Please dispose of product in accordance with your local laws and regulations.

Please dispose of all packaging materials thoughtfully.

FCC

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: This device may not cause harmful interference. This device must accept any interference received, including interference that may cause undesired operation. In accordance with the FCC regulations, any modifications or changes made to this unit by the user, without the express permission of Cygnett, may void the users authority to operate this device.

Serial No: 250809



RoHS



Cygnett.