

Tempo

Portable speaker for iPhone & iPod

Quick Start Guide





We're here to help!

Please get in touch with our Cygnett support team in Australia +61 (3) 9429 2552 or we're just an email away help@cygnett.com

Safety Precautions & Maintenance	2	
Getting Started	3	
Overview	4	- 5
Operation	6	- 8
Setting the clock	9	
Setting the alarm	10	
Snooze & timer function	11	
Technical Specifications	12	
Troubleshooting	12	- 13

Safety Precautions & Maintenance

2



Please read these operating and maintenance (servicing) instructions before installing and operating your speakers.

WARNING: To reduce the risk of fire or electric shock, do not expose this speaker system to rain or moisture (including swimming pools or objects filled with liquids, such as vases or drinks).

Important Safety Instructions

1. Always read all Safety and Operation instructions before use. Retain instructions for later reference.
2. For indoor use only. Do not expose the speaker to liquid, moisture or humidity.
3. Do not use abrasive cleaners to clean the speaker case as they may damage the finish. Always unplug the unit before cleaning.
4. Do not expose the speaker to extremely high or low temperatures.
5. Keep the unit away from direct sunlight.
6. Use only accessories and attachments as supplied and as designated in the instruction manual.
7. Do not attempt to open or modify the speaker in any way, as it does not contain any user serviceable parts. Please refer all servicing to qualified personnel.
8. Please store the unit in a dry place that is free from extreme temperatures and dust.
9. Always operate the speaker on a flat and level surface for operation.
10. Always operate the speaker unit away from children and animals who may play with the power cords and other small parts.
11. Always thoughtfully dispose of the packaging and the unit in accordance with the local regulations and in a responsible manner.

Thankyou for purchasing a Cygnett product. Please take the time to read the instruction manual prior to operating your Cygnett product.

The Cygnett Tempo is a 2.1, Alarm Clock Speaker featuring iPod dock, FM Radio, auxiliary input and remote control, designed for use with iPod and iPhone.

 

The Cygnett Tempo is compatible with most models of iPod including the latest iPod nano, iPod Classic, iPod Touch, and iPhone 3GS. Just plug your iPod in and press play.

Please read all operational and safety instructions thoroughly before commencing operation of the unit. Please follow all instructions carefully.

Note: Please retain these instructions for later reference.


Overview

- | | | |
|-----------------------|----------------------------|----------------------|
| 1. iPod Dock | 5. Snooze Button | 8. FM Tuning |
| 2. Volume Controls | 6. Alarm/Clock Set Buttons | 9. Display |
| 3. Power Button | 7. Audio Source Button | 10. FM Antenna Cable |
| 4. Alarm Reset Button | 11. Auxiliary input | 12. DC Power Jack |

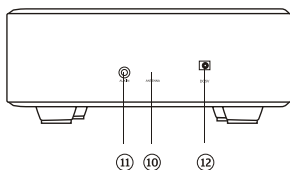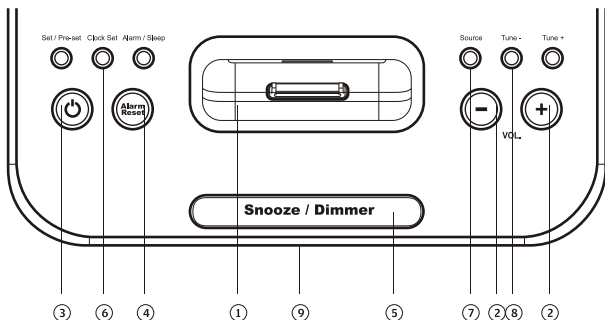


Display

 - Time/Frequency/Volume Display
- Audio Source
- AM/PM
- Day of the Week
- Alarm indicator
- Date

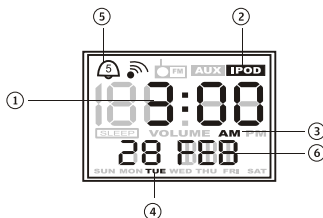

1. Power
2. "MUTE" - Mutes the speakers
3. "SOURCE" - Selects the audio source
4. ▲ - iPod menu up/FM tuning up
5. "MENU" - iPod Menu button
6. "SELECT" - iPod select button
7. "REPEAT" - iPod song repeat
8. ▼ - iPod menu down/FM tuning down
9. "SHUFFLE" - iPod shuffle songs
10. |◀◀ - Previous song/Rewind
11. Play/Pause
12. ▶▶| - Next song/Fast forward
13. Volume down
14. Volume up

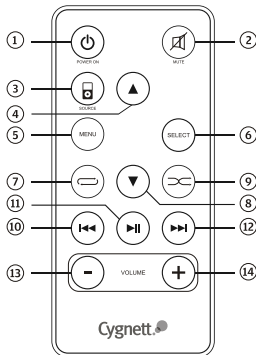 

To use your remote control please follow these instructions.

1. Unpack remote control and remove any protective covering.
2. Install battery with correct polarity, refer to markings on the inside of the battery compartment lid.

The remote control can be used to directly control the functions of the Cygnett Tempo speaker unit. In addition, the remote can be used to control most general iPod functions.

Operation

To setup your Cygnett iPod speaker system, please follow these simple steps:

- 1) Carefully unpack speaker, remote control, iPod inserts and power supply.
- 2) Carefully unwind power supply cable and connect to the socket on the rear of the speaker unit. Connect the power supply plugpack to a suitable mains outlet.
- 3) Carefully unwind FM Antenna Cable and extend for best reception.
- 4) Place unit on a stable, flat, level surface out of direct sunlight. Always avoid leaving the unit in direct sunlight as this may cause damage.
- 5) Select best suitable iPod dock insert for your iPod and fit into dock.
- 6) To power up your Speaker unit on, simply press the power button. The unit will turn on.

Sound

Volume can be controlled either using the volume buttons on the top of the Tempo speaker unit or the remote.

Sound can be muted by pressing the “MUTE” button on the remote.

FM Radio

To listen to the FM radio, please follow these instructions.

1. With the unit turned on, select either the FM radio using either the “SOURCE” button on the unit or the remote.
 2. Manually adjust the frequency using the “Tune-“ or “Tune+” buttons. The or buttons on the remote control can also be used to adjust the FM Frequency.
- NOTE: to scan to the next available station hold and press either the “Tune-“ or “Tune+” buttons.

iPod Docking

To dock, charge and play your iPod, please follow the following instructions.

1. Fit iPod carefully into dock, docking connector should easily mate with socket on your iPod. Please note: Do not force iPod, but carefully slide over dock connector as force may damage your iPod.
2. Turn speaker unit on, iPod should indicate that power is now connected.
3. Select desired song using either the remote control or the buttons located on your iPod.
4. To play, press the play button on your iPod or on the remote.
5. Volume can be adjusted by using the volume control buttons on the top of the unit, or the volume controls on the remote.
6. iPod Shuffle or Repeat modes can be easily activated by appropriate buttons located on the remote control.

Tip: Cygnett recommends always using the remote control to navigate iPod/iPhone menus & select music. Repeated use of iPod controls whilst docked may place undue stress upon dock connector or socket on the iPod.

Pre-Set Store

The Tempo speaker features 6 FM radio presets.

To store a selected station to a Pre-set: Select desired radio frequency. Press and hold “SET/PRE-SET” button on until the preset number flashes on the screen. Select desired preset number using the “Tune-“ and “Tune+” buttons. Press the “SET/PRESET” Button to set.

To select a preset station; toggle through the 6 presets by pressing the “SET/PRESET” button.

NOTE: You can easily switch between preset FM stations using the or buttons on the remote control.

Other devices

To listen to an external audio device via the “AUX IN”, auxiliary input please follow these instructions:

1. Connect an audio source such as a third party MP3 Player, PC, CD player or other audio source via the 3.5mm auxiliary input socket located on the rear of the Cygnett Tempo.
2. Turn the unit on and select Aux using the “SOURCE” button.
3. Use the Volume Buttons to select the required volume

Setting the clock

The Cygnett Tempo unit incorporates a 12Hr/24Hr clock.
To set the time:

- 1) Turn the unit on by pressing the power button.
- 2) Press and hold the “CLOCK SET” button until the display flashes.
- 3) Use the “-” & “+” Volume controls to select between 24 Hr and 12 Hr time operation. Press the “SET/PRE-SET” button to confirm. The hours will flash.
- 4) Select the correct hour using the volume buttons to adjust and press the “SET/PRE-SET” button to confirm. The minutes digits will now flash.
- 5) Set minutes, year, month and date, and day of week as above, using the “SET/PRE-SET” button to confirm.

Congratulations, your clock is now set!

The Cygnett Tempo unit incorporates an alarm which can be set to wake you up anytime with your favorite iPod tune, FM radio or a traditional buzzer.

To activate/deactivate alarm, please follow these instructions:

- 1) Turn the unit on by pressing the Power Button.
- 2) Press the “ALARM/SLEEP” button once. The current selected source, Alarm symbol (off alarm already set) and alarm volume will flash
- 3) Select the Alarm source from iPod, FM Radio and Buzzer using the “SOURCE” button. Set the Alarm volume using the “-“ & “+” Volume buttons. Press the “ALARM/SLEEP” button to toggle the alarm from off (no alarm symbol displayed), 7 days activation (Alarm Bell symbol) and Monday to Friday Alarm (Alarm bell with “5” shown).

The unit will return to standard display mode after 3 seconds.

To Set Alarm time

- 1) In the alarm mode with the alarm bell, source and volume flashing, press the “SET/PRESET” Button. The alarm hours digits will flash.
- 2) Set the hours using the volume buttons. Press the “SET/PRESET” button to confirm. The minutes digits will flash.
- 3) Set the minutes using the volume buttons, and press the “SET/PRESET” button when complete to confirm.

The alarm is now set and activated.

To cancel alarm when sounding press the “ALARM RESET” button on the top of the unit.

Snooze/sleep function

Snooze function

To activate the Snooze function; when alarm sounds, press “SNOOZE/DIMMER” button on the remote. alarm will pause for 9 min and re-sound.

Sleep function

The Tempo speaker incorporates a Sleep function which will turn the unit off and pause your iPod (if connected). To activate the Sleep function with audio playing; press and hold the “ALARM/SLEEP” button for two sec, until the SLEEP symbol is displayed. Use the Volume buttons to select the Sleep period.

Dimming

The Tempo speaker incorporates a digital display with 3 stepped dimmer functions. Dimming can be activated by pressing the “DIMMER/SNOOZE” button during normal operation.

Output Power	:	7W rms (2Wx2 + 3W)
Power Supply	:	110 - 240V AC 50Hz
Speaker Size	:	1" (32mm), 2" (70mm)
Auxiliary Input	:	3.5mm stereo phono plug

Troubleshooting

If you are experiencing problems with the Cygnett Tempo speaker system, please try the following:

1. Check the connection of the power cable to ensure that it is securely plugged into the speaker and the AC wall outlet and that unit is turned on.
2. Check that the volume is turned up on the main unit.
3. Check that the correct mode has been selected.
4. Check that a compatible iPod is correctly inserted into the dock or the FM radio is selected.
5. Check that the remote control is functioning correctly.

Problem	Cause	Resolution
No audio and no display	<ul style="list-style-type: none"> • Power is not connected • Faulty plug pack power supply 	<ul style="list-style-type: none"> • Connect power & recheck • Contact Cygnett for a replacement
No audio, but display works	<ul style="list-style-type: none"> • Incorrect audio mode selected • Volume turned down on unit • iPod not connected properly • Faulty speaker or iPod 	<ul style="list-style-type: none"> • Select correct audio mode • Turn volume up using volume controls • Remove iPod from dock and reconnect • Contact Cygnett
Poor FM reception with static or crackling	<ul style="list-style-type: none"> • Interference from other devices or poor reception quality • iPhone is not operating in Air-plane mode • Antenna is not fully extended 	<ul style="list-style-type: none"> • Relocate position of units FM antenna to receive a clearer signal • Select “Yes” to turn on “Air-plane” mode when you plug your iPhone into the dock • Extend antenna cable
Remote control does not control my iPod	<ul style="list-style-type: none"> • Flat batteries • iPod touch or iPhone not unlocked 	<ul style="list-style-type: none"> • Replace batteries with similar type • Please physically unlock the iPod touch or iPhone using the slider shown on the screen when you insert unit into the dock

Please email Cygnett directly at info@cygnett.com if you are still unable to resolve your problem with our product.

Disposal of waste products

This product complies with the European directive 2002/96/EC for Waste electrical products, as denoted by the Weee symbol on the product and packaging. Please dispose of product in accordance with your local laws and regulations.

Please dispose of all packaging materials thoughtfully.

FCC

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: This device may not cause harmful interference. This device must accept any interference received, including interference that may cause undesired operation. In accordance with the FCC regulations, any modifications or changes made to this unit by the user, without the express permission of Cygnett, may void the users authority to operate this device.



Cygnett.