

# GrooveRise

## Alarm Clock & Radio Speaker System for iPod

Quick Start Guide:



Cygnett.●

# Warranty

**Cygnett 12 Month Manufacturers Warranty**  
**Register online at [www.cygnett.com](http://www.cygnett.com) to**  
**activate your warranty.**


## Introduction

Thank you for purchasing Cygnett's GrooveRise iPod Alarm Clock & Radio Speaker System. Now you can experience the freedom to wake up to your favourite songs while the GrooveRise recharges your iPod around the clock. With a feature-packed remote you can command your iPod & GrooveRise from the comfort of your bed.

To get the most from your new GrooveRise, please take a few minutes to read the following instructions and familiarise yourself with the operation of the unit.

Getting to know the GrooveRise .....	2
Connecting the GrooveRise .....	4
Operating the GrooveRise	
Audio Modes .....	5
Setting the Time .....	5
Alarm & Alarm Mode Setting .....	6
Snooze/Nap Mode Setting .....	7
Sleep Mode Setting .....	7
Tuning the Radio .....	8
Volume Setting .....	8
Setting the Backlight. ....	8
GrooveRise Remote Control .....	10

## Top View

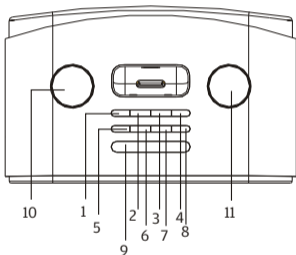

1. Alarm1/Alarm 2

2. Alarm Mode

3. Alarm Set

4. Time

5. Power

6. Dimmer

7. Sleep


8. Audio

9. Snooze

10. Set +/-

11. Volume +/-

Rear View

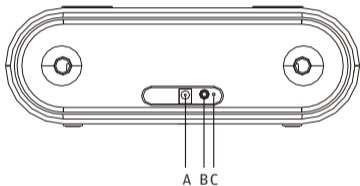

- A. DC 12V
- B. Line In
- C. FM Antenna

### Connecting the GrooveRise

Take the AC Power Adaptor and plug it into the Groove Rise 12v DC IN Port (A) at the back of the unit. Plug the AC Power Adaptor into the wall socket and switch it on. Press the Power button (5) located on the top of the GrooveRise. The unit should now be on and ready for use.

Please note:

The unit will have default settings of AUX mode, 20dB volume and display a time of 00:00.

## Operating the GrooveRise

### **Audio Modes:**

When the GrooveRise is turned on it will be in AUX audio mode.

If you have already docked your iPod, press the Audio button on the top of the unit and click through AUX/RADIO/IPOD audio modes until you have reached the desired audio mode.

If there is not an iPod docked, press the Audio button on the top of the unit to choose between AUX or RADIO modes.

### **Setting the Time:**

Press the Time Set button located on the top of the unit to select the Hour/Minute settings.

Then spin the set +/- wheel to adjust the hour and minute setting.

## Operating the GrooveRise

### **Alarm and Alarm Mode Setting:**

Press the AI1/AI2 button to enable alarm 1, alarm 2 or both.

Once you have enabled at least one alarm, press the AI Set button. Use the AI Set button to switch between the hours and minutes to set the alarm time.

Then use the Set +/- wheel to adjust the hours or minutes desired.

Set each alarm separately.

After you have set the alarm(s) press AI Mode to switch between AUX/RADIO/IPOD as the alarm type.

To set to volume of the alarm - see "Volume Setting" section.

The alarm will sound every day at the set time(s).

After the alarm has gone off, it can be turned off until the next day by pushing any button except the Snooze/Nap button.

## Operating the GrooveRise

### **Snooze/Nap Mode Setting:**

Press the Snooze/Nap button on the top of the unit after the alarm has gone off. The alarm will turn off temporarily and will go off again after 9 minutes approximately. You may use this feature until you turn the alarm off.

### **Sleep Mode Setting:**

The sleep mode allows you to set the unit to turn off after a certain amount of time (15/30/45/60 minutes).

Press the Sleep button on the top of the unit and the display will cycle through 15/30/45/60 minutes time options. Select the time you desire and the GrooveRise will turn off after the desired sleep time selected.

## Operating the GrooveRise

### **Tuning the Radio:**

When in Radio mode, use the Set+/- wheel to adjust to the FM frequency you want.

### **Volume Setting:**

The Default volume setting is 20dB (min volume is 0dB and max volume is 40dB).


To increase the volume, spin the Volume wheel clockwise. To decrease the volume spin the Volume wheel anti-clockwise.

To set the Volume of the alarm, simply adjust the volume to the desired level using the Volume wheel before pushing the Power button Off on the unit. The alarm will sound at the volume level selected prior to turning the unit off.

### **Setting the Back light:**

The back light has three settings: OFF, DIM and BRIGHT. The backlight can be switched on when the unit is powered on or off by pushing the Dimmer button to cycle through OFF, DIM and BRIGHT modes.

## Remote Control

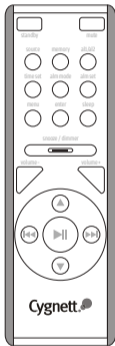

standby: power on/off.

mute: Mute or un-mute speaker

source: Ipod/radio/Aux audio source selection

memory: preset radio station

al1/al2: activates alarms 1 or 2

time set: sets the time, press to cycle through hour/ minute/ month/ day

alm mode: selects audio source for alarm

alm set: sets the alarm time, press to cycle through hour/minute\

menu: press to go back to previous menu on iPod

enter: selects the chosen function on ipod

sleep: press and cycle through to turn unit off in 15/30/45 or 60 minutes

**snooze/dimmer:** press to snooze alarm for 9 minutes, when alarm is not activated press to dim the LCD screen.

**volume -/+:** press to decrease and increase the volume

**▶|| play/pause:** press to start playback, press again to pause

**◀◀ prev:** go to previous song

**▶▶ next:** go to next song

**▲/▼ up/down:** press to scroll up or down through the iPod menu

N15150  
Z385



Cygnett. 

©2008 Cygnett    [www.cygnett.com](http://www.cygnett.com)

iPod is a trademark of Apple, Inc.,  
registered in the U.S. and other countries.